



VEID ENTERPRISES PTE LTD
1 Goldhill Plaza #03-21
Singapore 308899.
Tel: +65 6599 6805 Fax: +65 6251 1287
Email: sales@veid.net

How to reboot Hikvision Door Access System

1) Follow the IP website address and login.


The screenshot shows a web browser window with the address bar displaying "Not secure | 192.168.1.43/#/login". The page features the Hikvision logo in the top left corner and a language selector in the top right corner set to "Engli". The main content area is a dark-themed interface with a futuristic, high-tech aesthetic. On the right side, there is a white login form with two input fields: the first is labeled "admin" and the second is masked with "*****". Below the input fields is a prominent red "Login" button. The background of the interface includes a 3D rendering of a door access system with a camera and a face recognition overlay.

©2022 Hikvision Digital Technology Co., Ltd. All Rights Reserved.



VEID ENTERPRISES PTE LTD
1 Goldhill Plaza #03-21
Singapore 308899.
Tel: +65 6599 6805 Fax: +65 6251 1287
Email: sales@veid.net

2) Step 1: Click on System. *[Refer to the Diagram]*

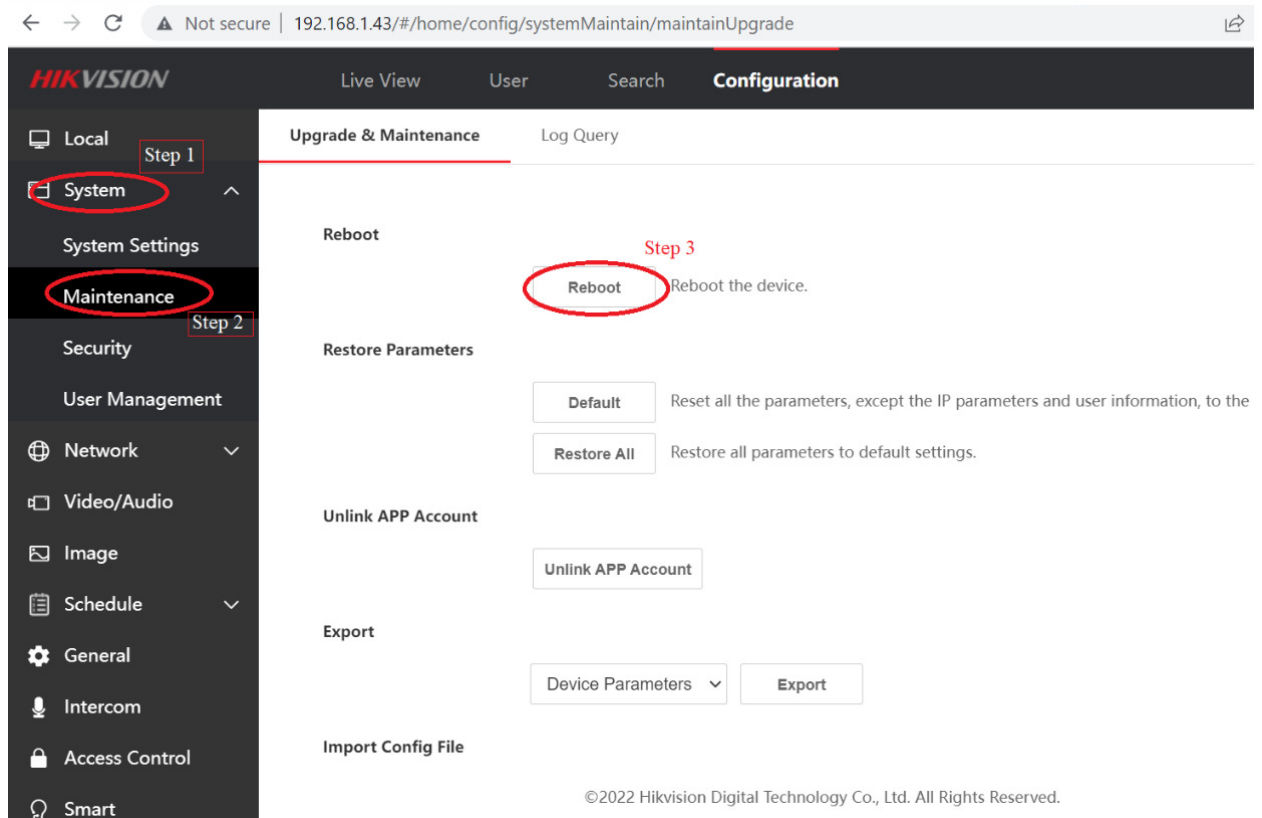

3) Step 2: Click on Maintenance. *[Refer to the Diagram]*

4) Step 3: Click on Reboot. *[Refer to the Diagram]*



VEID ENTERPRISES PTE LTD

1 Goldhill Plaza #03-21

Singapore 308899.

Tel: +65 6599 6805 Fax: +65 6251 1287

Email: sales@veid.net

5) Click OK to reboot.

