



VEID ENTERPRISES PTE LTD

1 Goldhill Plaza #03-21


Singapore 308899.

Tel: +65 6599 6805 Fax: +65 6251 1287

Email: sales@veid.net

USING HIKVISION IVMS-4200 TO REBOOT DOOR ACCESS SYSTEM

- 1) Click on Maintenance and Management>Device>Operation. *[Refer to Diagram]*

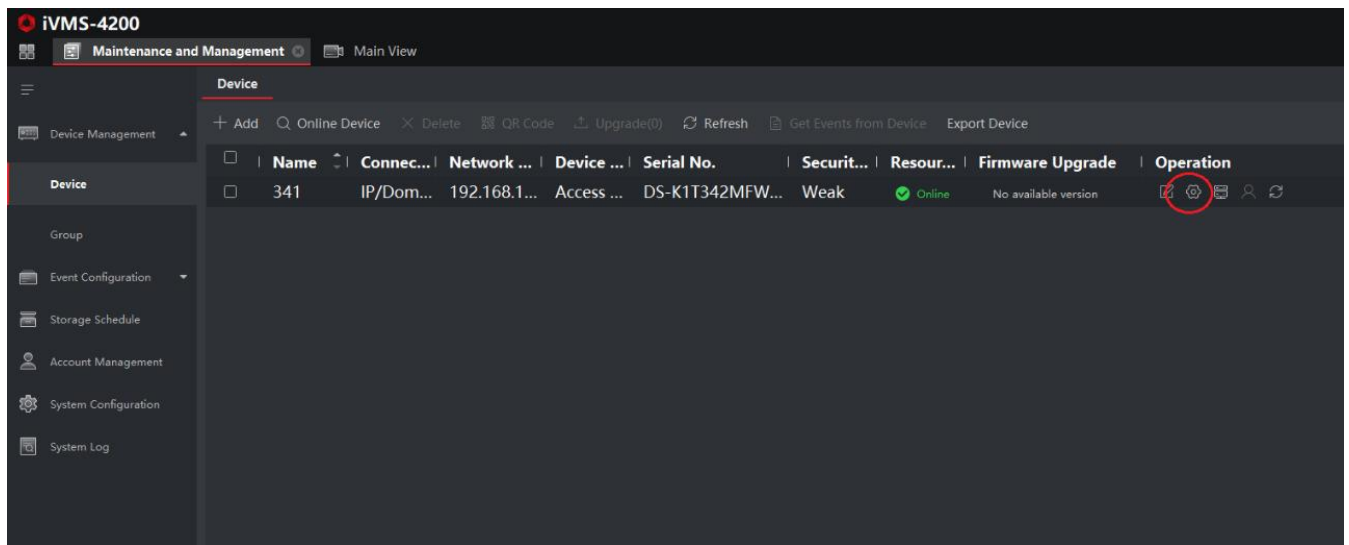



VEID ENTERPRISES PTE LTD

1 Goldhill Plaza #03-21

Singapore 308899.

Tel: +65 6599 6805 Fax: +65 6251 1287

Email: sales@veid.net

2) Click on System> Maintenance> Reboot.

The screenshot shows the 'Configuration' web interface. On the left is a dark sidebar menu with the following items: Local, System (circled in red), System Settings, Maintenance (circled in red), Security, User Management, Network, Video/Audio, Image, Schedule, General, Intercom, Access Control, Smart, Theme, Search, and User. The main content area is titled 'Upgrade & Maintenance' and contains several sections: 'Reboot' with a 'Reboot' button (circled in red) and the text 'Reboot the device.'; 'Restore Parameters' with 'Default' and 'Restore All' buttons; 'Unlink APP Account' with an 'Unlink APP Account' button; 'Export' with a 'Device Param' dropdown and an 'Export' button; 'Import Config File' with a 'Device Param' dropdown, a file selection input, and an 'Import' button; and 'Upgrade' with an 'Upgrade Settings' dropdown and a 'Controller' dropdown.